

## MODULAR SPILL PLATFORMS


## Create your own spill control system


Eagle Spill Containment Platforms are a modular solution for drum filling and dispensing operations. Combine platforms to create a customized spill control system to accommodate drum quantity and space needs-the system can expand as your capacity needs grow. For applications where a continuous sump is required, the optional Sump-to-Sump™ Drain Kit joins platforms together for a compliant solution. Kit includes one pair rubber grommets and one PTFE transfer tube.


- Low-profile centers measure 6.5 in (166 mm) high for easy handling of drums
- Built-in U-channels easily connect platforms
- · Seamless construction eliminates leaks
- High density polyethylene (HDPE) construction with lead-free UV protectant provides excellent chemical resistance and impact durability for long life
- · Removable HDPE flat top grates for simplified cleaning
- · Forklift pockets on most models for easy relocation
- Black models and grates made with 100% recycled HDPE
- All models are EPA compliant and support SPCC as standalone or after sump connection
- · Load and unload heavy drums with ease using optional ramp with anti-skid diamond pattern—use with most platform sizes



## **Common Configurations**





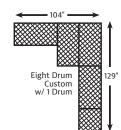









Description	Sump Capacity Gal/L	Load-bearing* Capacity lb/kg	External W x D x H	Compliance <sup>†</sup>	Model Black	Model Yellow	Compatible w/Ramp	Forklift Pockets
1 drum platform	15/56.8	2000/907	26.25 x 26 x 6.5 in (667 x 661 x 166 mm)	_	1633B	1633	No	No
1 drum platform w/drain	13/30.0				1633BD	1633D		
2 drum platform	30/113.6	5000/2268	26.25 x 51.5 x 6.5 in (667 x 1309 x 166 mm)		1632B	1632	Yes	Yes
2 drum platform w/drain	30/113.0				1632BD	1632D		
3 drum in-line platform	45/170.3	5000/2268	26.25 x 77.5 x 6.5 in (667 x 1969 x 166 mm)		_	16323	Yes	Yes
4 drum square platform	60.5/229.1	10000/4536	51.5 x 51.5 x 6.5 in (1309 x 1309 x 166 mm)	E, S, 0	1635B	1635	Yes	Yes
4 drum square platform w/drain					1635BD	1635D		
4 drum in-line platform	60.5/229.1	10000/4536	103.5 x 26.5 x 6.5 in (2629 x 667 x 166 mm)	E, S, 0	1647B	1647	Yes	Yes
4 drum in-line platform w/drain	00.5/229.1				1647BD	1647D		
6 drum platform	88/333.2	10000/4536	78.25 x 51.5 x 6.5 in (1988 x 1309 x 166 mm)	E, S, O, I	1686B	1686	Yes	Yes
6 drum platform w/drain	00/333.2				1686BD	1686D		
8 drum platform	121/458.1	10000/4536	103 x 51.5 x 6.5 in (2617 x 1309 x 166 mm)	E, S, O, I	1688B	1688	Yes	Yes
8 drum platform w/drain	(60.5/229.1 per side)				1688BD	1688D		
Ramp	_	1500/680	45.5 x 32 x 8 in (1156 x 813 x 203 mm)	_	1689B	1689	_	_

<sup>\*</sup>Loads are stated as a total safe allowable uniform distributed load

 $<sup>^{\</sup>dagger}E = EPA$  compliant; S = supports SPCC; O = OSHA compliant; I = IFC Compliant

Accessories	External W x D x H	Model
1 drum grate for 1 drum unit and 3 drum in-line	25.25 x 25.25 x 1.5 in (642 x 642 x 38 mm)	1642S
2 drum grate for all sizes except 1 drum	25.25 x 50.5 x 1.5 in (642 x 1283 x 38 mm)	1642IB
Sump-to-Sump™ drain kit	_	28800

Did you know? According to EPA 40 CFR Part 264.175, containment systems must have sufficient capacity to contain 10% of the volume of containers or the volume of the largest container, whichever is greater.

© 2021 Justrite Safety Group • Code EA450 (0521)