

55 GALLON LAB PACK DRUMS

Safely store or transport solid hazardous or non-hazardous material

Eagle plastic drums are ideal for safe storage, handling, and transportation of hazardous or non-hazardous materials, as well as spill containment and cleanup of hazardous materials. Drums can also be used as original shipping containers or for biowaste disposal and incineration.

Lab pack style drums are for use with smaller, non-damaged bottles, cans, carboys, and 5-gallon (18.9 L) pails of non-leaking hazardous materials; if leaking, drums must be packed with sufficient sorbents. No free liquids.

- Nestable shape minimizes storage space when stacked—tapered bottom allows suction-free separation
- HDPE construction—durable, lightweight, weather and corrosion resistant, and may be incinerated
- Meets DOT 49 CFR 173.12 regulations for shipping hazardous waste materials

Testing & Compliance—all Eagle drums are tested and comply with the following:

- U.S. Department of Transportation (DOT) regulations
- United Nations (UN) Certified to HM-181
- Operating temperature range (-40°F to 140°F)
- Drop tested – max weight at 0°F (48 hrs.)
- Vibration tested – ASTM D 999 Method A1 (Repetitive Shock)
- Approved for use with DOT and FAA Packing Groups I, II and III
- UL 94HB Flammability Rating
- Food Grade Quality FDA 21 CFR 177.1520
- Stack tested – three high at maximum weight capacity (24 hrs.)



With US and Imported Parts


Closure Types



Plastic Lever-Lock closure easily locks in place without tools. HDPE incinerates completely with no metal residue.



Metal Lever-Lock closure easily locks in place without tools. Powder-coated metal provides a stronger closure.

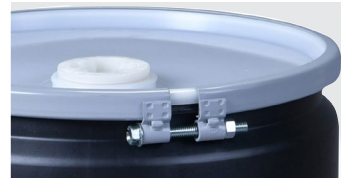

Metal Bolt Ring closure requires a torque wrench to tighten or untighten, providing a more secure closure.

Lid Type	Closure Type	Weight	UN/DOT Rating	Color	Model
Plain	Plastic Lever-Lock	23.5 lb (10.7 kg)	1H2/X80/S, 1H2/Y100/S	Yellow	1655
				Blue	1655B
				Black	1655BLK
Plain	Metal Lever-Lock	23.5 lb (10.7 kg)	1H2/X200/S, 1H2/Y250/S	Yellow	1655M
				Blue	1655MB
				Black	1655MBLK
Plain	Metal Bolt Ring	23.5 lb (10.7 kg)	1H2/X200/S, 1H2/Y250/S	Black	1655MBLKBR
				Blue	1655MBBR
Bung (1x2", 1x3/4")	Plastic Lever-Lock	23.5 lb (10.7 kg)	1H2/X80/S, 1H2/Y100/S	Black	1655BLKBG
				Yellow	1655MBG
Bung (1x2", 1x3/4")	Metal Lever-Lock	23.5 lb (10.7 kg)	1H2/X200/S, 1H2/Y250/S	Blue	1655MBBG
				Black	1655MBLKBG
				Yellow	1655MBRBG
Bung (1x2", 1x3/4")	Metal Bolt Ring	23.5 lb (10.7 kg)	1H2/X200/S, 1H2/Y250/S	Blue	1655MBBRBG
				Black	1655MBKLRBG



HDPE
100% Recyclable

Capacity: 55 gal (212 L)

Maximum Weight Capacity:

Plastic Lever-Lock
Packing Group I: 176 lb (80 kg)
Packing Group II, III: 220 lb (100 kg)
Metal Lever-Lock & Metal Bolt Ring
Packing Group I: 440 lb (200 kg)
Packing Group II, III: 551 lb (250 kg)

Maximum Overpack Capacity (if used as an overpack drum):
30 gal (113.6 L)

Inside Dimensions:

Top: 22-7/8" (58.1 cm)
Bottom: 19" (48.3 cm)
Height: 38-9/16" (98 cm)

Outside Dimensions:

Top: 23-3/4" (60.3 cm)
Bottom: 19-3/8" (49.2 cm)
Height: 39-1/8" (99.4 cm)

Pallet Quantity (estimated): 32

Truckload Quantity (estimated): 864