


Nitrogen Pass-Through For Customer Field Installation, Stainless Steel - 25973

Product Images

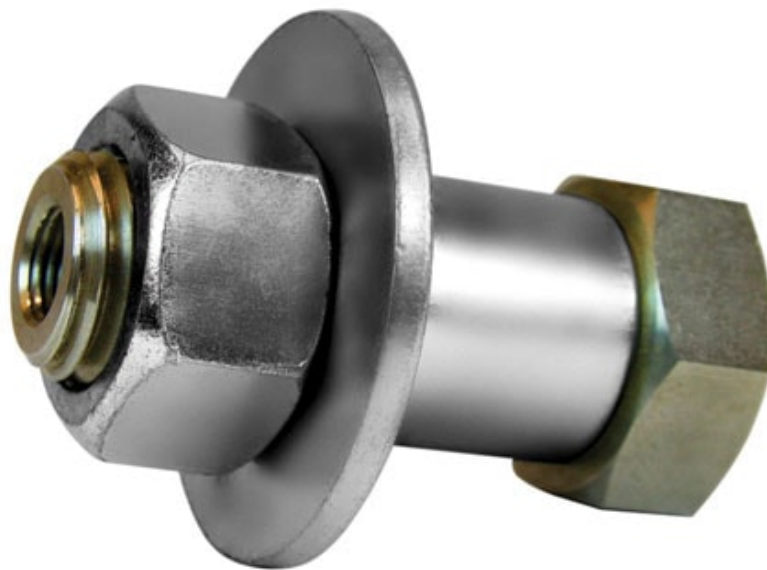

Short Description

- Nitrogen pass-through kit (not valved)

- All stainless-steel construction
- Regulated pressurized nitrogen cylinder pressurizes container inside cabinet to dispense solvent at low pressure out of cabinet
- Can be used for vacuum or pressure venting containers inside cabinets
- Customer installed in field

Description

The pass-through kit (model 25973) can be used on the sides or back of flammable liquid safety cabinets. This unique system provides a means to dispense solvents with pressurized nitrogen through the wall of a cabinet, if a pressure nitrogen assist from an outside source is needed. It can also be used for vacuum or pressure venting containers inside the cabinet. The stainless-steel construction without a check valve allows flow in either direction. A ¼-in NPT (tapered) fitting is required to thread into both sides of the pass-through. Only install on the sides and back of the safety cabinet, never on the doors, bottom or top of a cabinet.

Note: This item is for the customer's field installation only and will void the cabinet's FM Approval. Please see the [instruction guide](#) for more information. This [TechTALK](#) has guidelines for ordering factory-installed pass-through kits for Justrite safety cabinets to maintain FM approval and our 10-year warranty.

Specifications

Model No	25973
UPC	697841008663
Brand	Justrite
International Model No.	25973
Net Weight, lbs	1.0
Net Weight, kgs	0.5