


16 Horizontal 20 to 33 Lb. LPG Cylinder Capacity, Gas Cylinder Cabinet Locker, Aluminum - 23005

Product Images

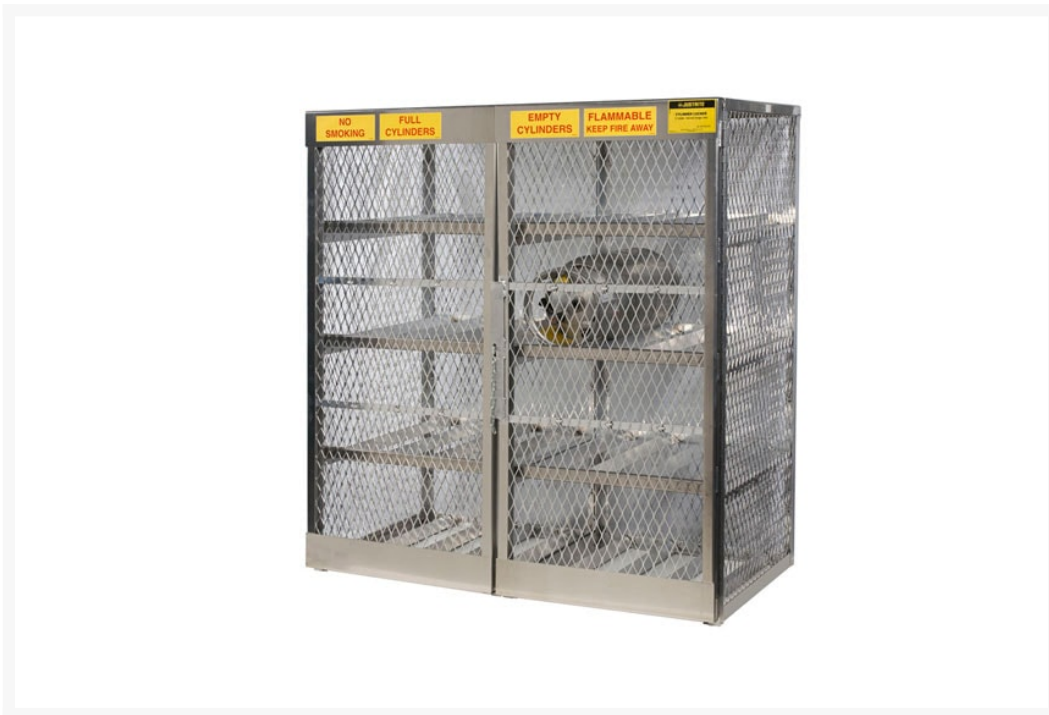

Short Description

- Sized for large, 33 lb (8 gal) liquid petroleum gas (LPG) cylinders and can also accommodate smaller 20 lb (5 gal) use cases
- Safely holds sixteen 20 or 33 lb (9 or 15 kg) liquid petroleum gas cylinders with exterior dimensions of 65 x 60 x 32 in (1651 x 1524 x 813 mm), stored horizontally
- Lightweight material (66% lighter than steel) reduces shipping and transport costs
- Solid roof panel that slopes back to shed water and ice
- Pre-drilled anchor holes at each corner that accept 1/2" or 12mm anchor bolts (not included)
- In compliance with NFPA 58 LP Gas Code 8.4.2.1, 6.19.4.2 and OSHA 1910.253

Description

Justrite Cylinder Storage cabinets for 16 Horizontal 20 to 33 Lb. Cylinders (Model 23005) provide horizontal storage of liquid petroleum gas (LPG) gas cylinders. It safely holds sixteen 20 or 33 lb (9 or 15 kg) liquid petroleum gas cylinders with exterior dimensions of 65 x 60 x 32 in (1651 x 1524 x 813 mm). As one of five horizontal LPG cylinder storage options and nine modular styles for comprehensive vertical and horizontal gas cylinder storage solutions, model 23005 includes 2 doors and 6 removable shelves.

Gas cylinder storage lockers from Justrite are ideal for those seeking a long-term, trusted, one-and-done investment in a proven product with superior design and manufacturing considerations. These cylinder lockers from Justrite are extremely durable and easy-to-use. Welded security lug-on front panel door accepts a padlock (not included) for extra protection from tampering. Heavy gauge 0.065 (1.65mm) 100% welded aluminum mesh and extruded (not formed) frame add rigidity. Ventilated designs prevent buildup of dangerous gases. Justrite cylinder lockers do not rust, corrode, or discolor.

All our gas cylinder storage cages have an exclusive solid aluminum roof panel that slants toward the back to shed water and ice. They feature raised floor panels for added support, to prevent cylinders from resting in puddles. Justrite lockers ship fully assembled for easier setup.

Our customers use model 23005 to remain in compliance with NFPA 58 and OSHA 1910.253 regulations, and more. Each locker includes four warning labels for added precautions and safety, and are supplied with chains to secure each cylinder from falling over.

Justrite gas cylinder lockers are available across a range of horizontal, vertical and combination options to meet the precise spatial and compliance needs for a range of situations. Eleven modular styles provide an efficient, attractive solution to expand multi-cabinet storage.

Safe LPG Cylinder Storage

When you're storing or transporting liquid petroleum gas (LPG), it's crucial that your facility or vehicle comply with local codes, regional requirements, commercial regulations, and recommendations from fire departments.

Liquid petroleum gas (LPG) has a wide range of industrial and residential applications, from gas welding to thermo applied coatings, furnaces, and more. But this substance is also extremely flammable in storage and transit, with the potential to ignite in room temperature air.

Handling this substance requires extreme caution, with absolutely no room for error. The gas is odorless in its natural state, which means that a deadly accident can happen with no warning during storage or transport.

Specifications

Model No	23005
UPC	697841055704
Brand	Justrite
International Model No.	230051
Pallet Quantity	1
Material Specifications	Aluminum
OSHA Compliance	Yes
Complies with NFPA Code 30	Yes
Storage Type	Horizontal
Cylinder Capacity	16
Number of Doors	2
Door Style	Manual
Number of Shelves	6
Adjustable Shelves	No
Exterior Dimensions, inches	65" H x 60" W x 32" D
Exterior Dimensions, mm	1651mm H x 1524mm W x 813mm D
Net Weight, lbs	210.0
Net Weight, kgs	95.3