


# 40 Gallon, 3 Shelves, 2 Doors, Manual Close, Paint Safety Cabinet, Tower™, Red - PI32XLEGS

## Product Images

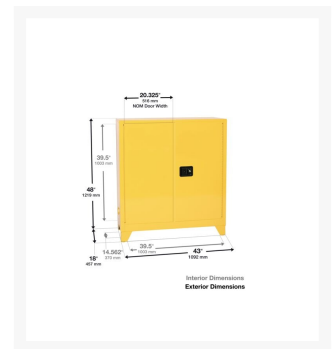

## Short Description

- Reinforced double wall construction with 1-1/2 in (3.8 cm) air space on sides, top, bottom, back and doors
- Constructed of 18-gauge steel
- Lead-free, high-gloss, baked-on powder finish
- Continuous piano hinges
- Ground connection

- Four adjustable 4 in (10.2 cm) legs help provide easy cleaning under cabinet and moving with a forklift or pallet jack
- Trilingual warning labels
- 2 in (5.1 cm) raised leakproof sill
- Patented adjustable galvanized steel shelves direct spills to back and bottom of leakproof sump and hold 350 lbs. (158.8 kg) Uniform Distributed Load (UDL)
- Internal and external welded construction
- Two 2 in (5.1 cm) internal vents with fire baffle and cap
- Flush mounted door handle with key lock
- Three-point stainless steel bullet latching system
- 3 in (7.6 cm) centers for shelf brackets
- Self-latching doors
- Door closings: Manual Close (180° opening)

## Description

---

Eagle 40 Gallon, manual close, Tower™ Paint and Ink Safety Cabinets come with additional shelves to maximize storage space and have 4 in (10.2 cm) adjustable legs. Constructed of 18-gauge (1 mm) steel, the sides, top, bottom, and doors are double-walled with a 1-1/2 in (3.8 cm) air space between walls. Includes two vents, each have 2 in (5.1 cm) threaded fittings and a fire baffle and cap. Cabinets have a high gloss powder coat finish with red trilingual warning, plus grounding attachment, 3-point latch system, and 2-in (5.1 cm) raised, leakproof door sill. Each shelf is adjustable on 3 in (7.6 cm) centers, supported by 4 brackets, with a 350 lbs (159 kg) safe allowable load. Cabinets are FM-Approved and meet NFPA Code 30 and OSHA requirements.

## Specifications

---

Model No	PI32XLEGS
Color	Red
Material Specifications	18-Gauge Steel
FM Approval	Yes
OSHA Compliance	Yes
Complies with NFPA Code 30	Yes
Door Style	Manual Close
UPC	048441691203
Dimensions, Exterior	43W x 18Dx 48H
Dimensions, Interior	39.5" W x 14.56" D x 39.5" H (100.3 x 37 x 100.3 cm)
Number of Doors	2
Number of Shelves	3
Uniform Fire Code	No
Lock	Yes
Gallon Capacity	40
Liter Capacity	151.42
Fork Pocket (2in x 7in)	Yes
Replacement Shelf Model No.	29937
Pallet Quantity	1
Shelf Depth	14" (35.6 cm)
Net Weight, lbs	215
Net Weight, kgs	97.52
Adjustable Shelf	Yes