
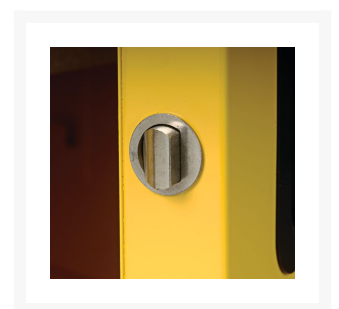


60 Gallon, 2 Drum, Vertical, 1 Shelf, 2 Door, Manual Close, Haz-Mat Safety Cabinet, Yellow - HAZ1992X

Product Images

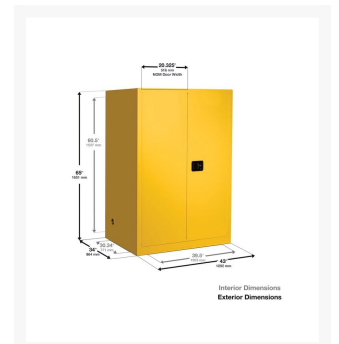

Short Description

- Reinforced double wall construction with 1-1/2 in (3.8 cm) air space on sides, top, bottom, back and doors

- Constructed of 18-gauge steel
- Lead-free, high-gloss, baked-on powder finish
- Continuous piano hinges
- Ground connection
- Four adjustable galvanized leveling legs
- Trilingual warning labels
- 2 in (5.1 cm) raised leakproof sill
- Patented adjustable galvanized steel shelves direct spills to back and bottom of leakproof sump and hold 350 lbs. (158.8 kg) Uniform Distributed Load (UDL)
- Internal and external welded construction
- Two 2 in (5.1 cm) internal vents with fire baffle and cap
- Flush mounted door handle with key lock
- Three-point stainless steel bullet latching system
- 3 in (7.6 cm) centers for shelf brackets
- Self-latching doors
- Door closings: Manual Close (180° opening)

Description

Eagle 60 Gallon, manual close, HAZ-MAT Drum Storage Safety Cabinet can safely contain (2) 30 gallon drums of flammable liquids or hazardous waste. The cabinet features a convenient half shelf for additional storage space for accessories or containers and drum rollers for easy drum handling. Constructed of 18-gauge (1 mm) steel, the sides, top, bottom, and doors are double-walled with a 1-1/2 in (3.8 cm) air space between walls. Includes two vents, each have 2 in (5.1 cm) threaded fittings and a fire baffle and cap. Cabinets have a high gloss powder coat finish with red trilingual warning, plus grounding attachment, 3-point latch system, and 2-in (5.1 cm) raised, leakproof door sill. Each shelf is adjustable on 3 in (7.6 cm) centers, supported by 4 brackets, with a 350 lbs (159 kg) safe allowable load. Cabinets are FM-Approved and meet NFPA Code 30 and OSHA requirements.

Specifications

Model No	HAZ1992X
Color	Yellow
Brand	Eagle
Material Specifications	18-Gauge Steel
FM Approval	Yes
OSHA Compliance	Yes
Complies with NFPA Code 30	Yes
Door Style	Manual Close
UPC	48441692200
Dimensions, Exterior	34W x 34Dx 65H
Dimensions, Interior	39.5" W x 30.34" D x 60.5" H (100.3 x 77.1 x 153.7 cm)
Number of Doors	2
Number of Shelves	1
Uniform Fire Code	No
Lock	Yes
Gallon Capacity	60
Liter Capacity	227.12
Replacement Shelf Model No.	29945
Pallet Quantity	1
Shelf Depth	29" (73.7 cm)
Net Weight, lbs	451
Net Weight, kgs	204.57
Adjustable Shelf	Yes