


---

# 55 Gallon, 1 Drum, Vertical, 1 Shelf, 2 Door, Self Close, Pesticide Safety Cabinet, Green - PEST2610X

## Product Images

---

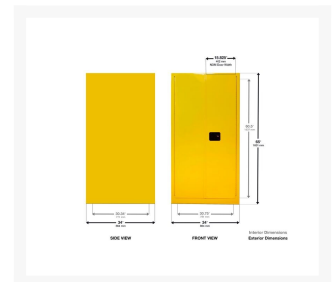

## Short Description

---

- Reinforced double wall construction with 1-1/2 in (3.8 cm) air space on sides, top, bottom, back and doors
- Constructed of 18-gauge steel
- Lead-free, high-gloss, baked-on powder finish
- Continuous piano hinges

- Ground connection
- Four adjustable galvanized leveling legs
- Trilingual warning labels
- 2 in (5.1 cm) raised leakproof sill
- Patented adjustable galvanized steel shelves direct spills to back and bottom of leakproof sump and hold 350 lbs. (158.8 kg) Uniform Distributed Load (UDL)
- Internal and external welded construction
- Two 2 in (5.1 cm) internal vents with fire baffle and cap
- Flush mounted door handle with key lock
- Three-point stainless steel bullet latching system
- 3 in (7.6 cm) centers for shelf brackets
- Self-latching doors
- Door closings: Self-Closing (135° opening)
- Concealed self-close mechanism provides obstruction-free access to top shelf space
- Self-indexing doors guarantee they will close in sequence and ensure a tight closure from top to bottom

## Description

---

Eagle 55 Gallon, self-closing, Pesticide Vertical Drum Storage Safety Cabinet, can safely contain a 55-gallon drum and provides needed protection for companies who specialize in lawn care, golf course management, agricultural interests or who handle and store pesticides and poisons. The cabinet features a convenient half shelf for additional storage space for accessories or containers and drum supports to keep drums elevated off cabinet sump. Constructed of 18-gauge (1 mm) steel, the sides, top, bottom, and doors are double-walled with a 1-1/2 in (3.8 cm) air space between walls. Includes two vents, each have 2 in (5.1 cm) threaded fittings and a fire baffle and cap. Cabinets have a high gloss powder coat finish with trilingual warning label, plus grounding attachment, 3-point latch system, and 2-in (5.1 cm) raised, leakproof door sill. Each shelf is adjustable on 3 in (7.6 cm) centers, supported by 4 brackets, with a 350 lbs (159 kg) safe allowable load. Cabinets are FM-Approved and meet NFPA Code 30 and OSHA requirements.

## Specifications

---

Model No	PEST2610X
Color	Green
Material Specifications	18-Gauge Steel
FM Approval	Yes
OSHA Compliance	Yes
Complies with NFPA Code 30	Yes
Door Style	Self-close
UPC	048441692347
Dimensions, Exterior	34W x 34Dx 65H
Dimensions, Interior	30.75" W x 30.34" D x 60.5" H (78.1 x 77.1 x 153.7 cm)
Number of Doors	2
Number of Shelves	1
Uniform Fire Code	Yes
Lock	Yes
Gallon Capacity	55
Liter Capacity	208.2
Replacement Shelf Model No.	29946
Shelf Depth	14" (35.6 cm)
Net Weight, lbs	349
Net Weight, kgs	158.3
Adjustable Shelf	Yes

## Prop 65

---

**⚠️WARNING:**This product can expose you to chemicals including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).