



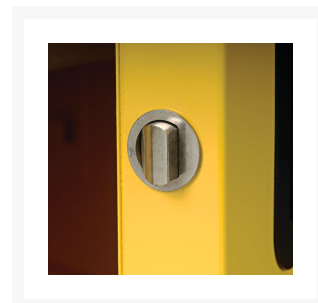

90 Gallon Fire Cabinet, 2 Shelves, 2 Door, Manual Close, Tower, Yellow - 1992XLEGS

Product Images

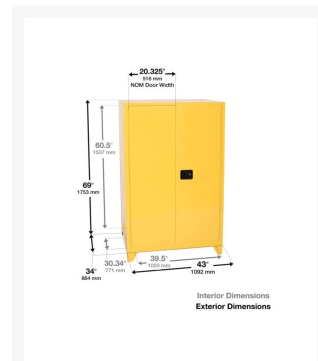

Short Description

- Reinforced double wall construction with 1-1/2 in (3.8 cm) air space on sides, top, bottom, back and

doors

- Constructed of 18-gauge steel
- Lead-free, high-gloss, baked-on powder finish
- Continuous piano hinges
- Ground connection
- Four adjustable 4 in (10.2 cm) legs help provide easy cleaning under cabinet and moving with a forklift or pallet jack
- Trilingual warning labels
- 2 in (5.1 cm) raised leakproof sill
- Patented adjustable galvanized steel shelves direct spills to back and bottom of leakproof sump and hold 350 lbs. (158.8 kg) Uniform Distributed Load (UDL)
- Internal and external welded construction
- Two 2 in (5.1 cm) internal vents with fire baffle and cap
- Flush mounted door handle with key lock
- Three-point stainless steel bullet latching system
- 3 in (7.6 cm) centers for shelf brackets
- Self-latching doors
- Door closings: Manual Close (180° opening)

Description

90 Gallon, self-closing, Tower™ Flammable Liquid Safety Cabinet is constructed of 18-gauge (1 mm) steel and has 4 in (10.2 cm) adjustable legs. The sides, top, bottom, and doors are double-walled with a 1-1/2 in (3.8 cm) air space between walls. Includes two vents, each have 2 in (5.1 cm) threaded fittings and a fire baffle and cap. Cabinets have a high gloss powder coat finish with red trilingual warning, plus grounding attachment, 3-point latch system, and 2-in (5.1 cm) raised, leakproof door sill. Each shelf is adjustable on 3 in (7.6 cm) centers, supported by 4 brackets, with a 350 lbs (159 kg) safe allowable load. Cabinets are FM-Approved and meet NFPA Code 30 and OSHA requirements.

Specifications

Model No	1992XLEGS
Color	Yellow
Material Specifications	18-Gauge Steel
FM Approval	Yes
OSHA Compliance	Yes
Complies with NFPA Code 30	Yes
Door Style	Manual Close
UPC	48441692194
Dimensions, Exterior	43W x 34Dx 69H
Dimensions, Interior	39.5" W x 30.34" D x 60.5" H (100.3 x 77.1 x 153.7 cm)
Number of Doors	2
Number of Shelves	2
Uniform Fire Code	No
Lock	Yes
Gallon Capacity	90
Liter Capacity	340.69
Fork Pocket (2in x 7in)	Yes
Replacement Shelf Model No.	29945
Pallet Quantity	1
Shelf Depth	29" (73.7 cm)
Net Weight, lbs	405
Net Weight, kgs	183.7
Adjustable Shelf	Yes