
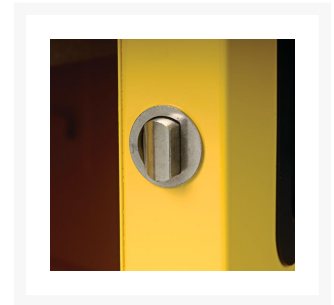


# 90 Gallon Fire Cabinet, 2 Shelves, 2 Door, Self Close, Tower, Yellow - 9010XLEGS

## Product Images

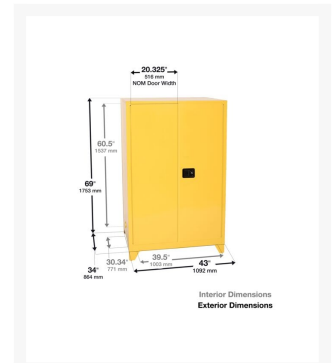

## Short Description

- Reinforced double wall construction with 1-1/2 in (3.8 cm) air space on sides, top, bottom, back and doors
- Constructed of 18-gauge steel
- Lead-free, high-gloss, baked-on powder finish
- Continuous piano hinges
- Ground connection

- Four adjustable 4 in (10.2 cm) legs help provide easy cleaning under cabinet and moving with a forklift or pallet jack
- Trilingual warning labels
- 2 in (5.1 cm) raised leakproof sill
- Patented adjustable galvanized steel shelves direct spills to back and bottom of leakproof sump and hold 350 lbs. (158.8 kg) Uniform Distributed Load (UDL)
- Internal and external welded construction
- Two 2 in (5.1 cm) internal vents with fire baffle and cap
- Flush mounted door handle with key lock
- Three-point stainless steel bullet latching system
- 3 in (7.6 cm) centers for shelf brackets
- Self-latching doors
- Door closings: Manual Close (180° opening)

## Description

---

90 Gallon, self-closing, Tower™ Flammable Liquid Safety Cabinet is constructed of 18-gauge (1 mm) steel and has 4 in (10.2 cm) adjustable legs. The sides, top, bottom, and doors are double-walled with a 1-1/2 in (3.8 cm) air space between walls. Includes two vents, each have 2 in (5.1 cm) threaded fittings and a fire baffle and cap. Cabinets have a high gloss powder coat finish with red trilingual warning, plus grounding attachment, 3-point latch system, and 2-in (5.1 cm) raised, leakproof door sill. Each shelf is adjustable on 3 in (7.6 cm) centers, supported by 4 brackets, with a 350 lbs (159 kg) safe allowable load. Cabinets are FM-Approved and meet NFPA Code 30 and OSHA requirements.


## Specifications

---

Model No	9010XLEGS
Color	Yellow
Material Specifications	18-Gauge Steel
FM Approval	Yes
OSHA Compliance	Yes
Complies with NFPA Code 30	Yes
Door Style	Self-close
UPC	048441692125
Dimensions, Exterior	43W x 34Dx 69H
Dimensions, Interior	39.5" W x 30.34" D x 60.5" H (100.3 x 77.1 x 153.7 cm)
Number of Doors	2
Number of Shelves	2
Uniform Fire Code	Yes
Lock	Yes
Gallon Capacity	90
Liter Capacity	340.69
Fork Pocket (2in x 7in)	Yes
Replacement Shelf Model No.	29945
Pallet Quantity	1
Shelf Depth	29" (73.7 cm)
Net Weight, lbs	407
Net Weight, kgs	184.61
Adjustable Shelf	Yes

## Prop 65

---

 **WARNING:** This product can expose you to chemicals including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).