




## 24 Gallon Fire Cabinet, 3 Shelves, 2 Doors, Manual Close, Wall Mount, Gray - 1976XGRAY

### Product Images

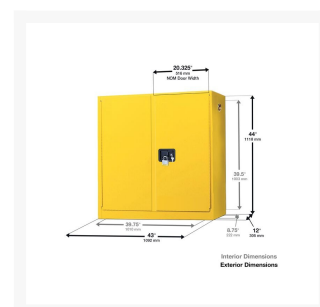

### Short Description

- Reinforced double wall construction with 1-1/2 in (3.8 cm) air space on sides, top, bottom, back and doors
- Constructed of 18-gauge steel
- Lead-free, high-gloss, baked-on powder finish
- Continuous piano hinges

- Ground connection
- Four adjustable galvanized leveling legs
- Trilingual warning labels
- 2 in (5.1 cm) raised leakproof sill
- Patented adjustable galvanized steel shelves direct spills to back and bottom of leakproof sump and hold 350 lbs. (158.8 kg) Uniform Distributed Load (UDL)
- Internal and external welded construction
- Two 2 in (5.1 cm) internal vents with fire baffle and cap
- Flush mounted door handle with key lock
- Three-point stainless steel bullet latching system
- 3 in (7.6 cm) centers for shelf brackets
- Self-latching doors
- Door closings: Manual Close (180° opening)

## Description

---

24 Gallon, manual close, Wall Mount Flammable Liquid Safety Cabinet is constructed of 18-gauge (1 mm) steel. The sides, top, bottom, and doors are double-walled with a 1-1/2 in (3.8 cm) air space between walls. Includes two vents, each have 2 in (5.1 cm) threaded fittings and a fire baffle and cap. Cabinets have a high gloss powder coat finish with red trilingual warning, plus grounding attachment, 3-point latch system, and 2-in (5.1 cm) raised, leakproof door sill. Each shelf is adjustable on 3 in (7.6 cm) centers, supported by 4 brackets, with a 350 lbs (159 kg) safe allowable load. Includes wall-mounting brackets. Cabinets are FM-Approved and meet NFPA Code 30 and OSHA requirements. Wall mounting hardware is included.

## Specifications

---

Model No	1976XGRAY
Color	Gray
Material Specifications	18-Gauge Steel
FM Approval	Yes
OSHA Compliance	Yes
Complies with NFPA Code 30	Yes
Door Style	Manual Close
UPC	48441690787
Dimensions, Exterior	43W x 12Dx 44H
Dimensions, Interior	39.75" W x 8.75" D x 39.5" H (101 x 22.2 x 100.3 cm)
Number of Doors	2
Number of Shelves	3
Lock	Yes
Gallon Capacity	24
Liter Capacity	90.85
Replacement Shelf Model No.	29938
Shelf Depth	8.6" (21.9 cm)
Net Weight, lbs	189
Net Weight, kgs	85.73
Adjustable Shelf	Yes