




## 45 Gallon Fire Cabinet, 2 Shelves, 2 Doors, Self Close, Gray - 4510XGRAY

### Product Images

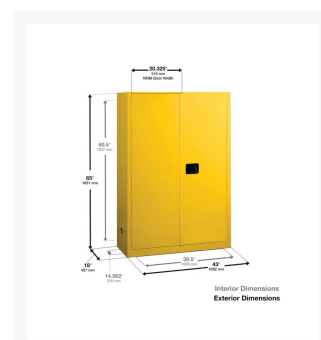

### Short Description

- Reinforced double wall construction with 1-1/2 in (3.8 cm) air space on sides, top, bottom, back and doors
- Constructed of 18-gauge steel
- Lead-free, high-gloss, baked-on powder finish
- Continuous piano hinges

- Ground connection
- Four adjustable galvanized leveling legs
- Trilingual warning labels
- 2 in (5.1 cm) raised leakproof sill
- Patented adjustable galvanized steel shelves direct spills to back and bottom of leakproof sump and hold 350 lbs. (158.8 kg) Uniform Distributed Load (UDL)
- Internal and external welded construction
- Two 2 in (5.1 cm) internal vents with fire baffle and cap
- Flush mounted door handle with key lock
- Three-point stainless steel bullet latching system
- 3 in (7.6 cm) centers for shelf brackets
- Self-latching doors
- Door closings: Self-Closing (135° opening)
- Concealed self-close mechanism provides obstruction-free access to top shelf space
- Self-indexing doors guarantee they will close in sequence and ensure a tight closure from top to bottom

## Description

---

45 Gallon, self-closing, Flammable Liquid Safety Cabinet is constructed of 18-gauge (1 mm) steel. The sides, top, bottom, and doors are double-walled with a 1-1/2 in (3.8 cm) air space between walls. Includes two vents, each have 2 in (5.1 cm) threaded fittings and a fire baffle and cap. Cabinets have a high gloss powder coat finish with red trilingual warning, plus grounding attachment, 3-point latch system, and 2-in (5.1 cm) raised, leakproof door sill. Each shelf is adjustable on 3 in (7.6 cm) centers, supported by 4 brackets, with a 350 lbs (159 kg) safe allowable load. Cabinets are FM-Approved and meet NFPA Code 30 and OSHA requirements.

## Specifications

---

|                             |  |
|-----------------------------|--|
| Model No                    | 4510XGRAY  |
| Color                       | Gray   |
| Material Specifications     | 18-Gauge Steel                                       |
| FM Approval                 | Yes  |
| OSHA Compliance             | Yes  |
| Complies with NFPA Code 30  | Yes  |
| Door Style                  | Self-close   |
| UPC                         | 48441691357  |
| Dimensions, Exterior        | 43W x 18Dx 65H                                       |
| Dimensions, Interior        | 39.5" W x 14.56" D x 60.5" H (100.3 x 37 x 153.7 cm) |
| Number of Doors             | 2  |
| Number of Shelves           | 2  |
| Lock                        | Yes  |
| Gallon Capacity             | 45   |
| Liter Capacity              | 170.34   |
| Replacement Shelf Model No. | 29937  |
| Shelf Depth                 | 14" (35.6 cm)  |
| Net Weight, lbs             | 267  |
| Net Weight, kgs             | 121.11   |
| Adjustable Shelf            | Yes  |

## Prop 65

---

**⚠️WARNING:** This product can expose you to chemicals including Lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).