


# 24 Gallon, 3 Shelf, 1 Door, Manual Close, Space Saver Pesticide Safety Cabinet, Green - PEST1923X

## Product Images

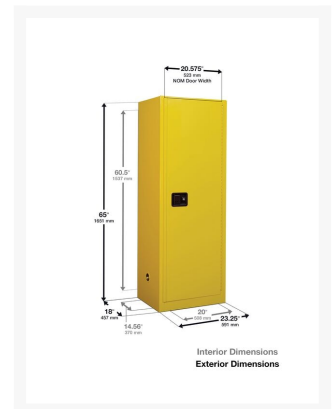

## Short Description

- Reinforced double wall construction with 1-1/2 in (3.8 cm) air space on sides, top, bottom, back and doors
- Constructed of 18-gauge steel
- Lead-free, high-gloss, baked-on powder finish
- Continuous piano hinges
- Ground connection
- Four adjustable galvanized leveling legs
- Trilingual warning labels
- 2 in (5.1 cm) raised leakproof sill
- Patented adjustable galvanized steel shelves direct spills to back and bottom of leakproof sump and hold 350 lbs. (158.8 kg) Uniform Distributed Load (UDL)

- Internal and external welded construction
- Two 2 in (5.1 cm) internal vents with fire baffle and cap
- Flush mounted door handle with key lock
- Three-point stainless steel bullet latching system
- 3 in (7.6 cm) centers for shelf brackets
- Self-latching doors
- Door closings: Manual Close (180° opening)

## Description

---

Eagle 24 Gallon, manual close, Space Saver Pesticide Safety Cabinet provides needed protection for companies who specialize in lawn care, golf course management, agricultural interests or who handle and store pesticides and poisons. Constructed of 18-gauge (1 mm) steel, the sides, top, bottom, and doors are double-walled with a 1-1/2 in (3.8 cm) air space between walls. Includes two vents, each have 2 in (5.1 cm) threaded fittings and a fire baffle and cap. Cabinets have a high gloss powder coat finish with trilingual warning, plus grounding attachment, 3-point latch system, and 2-in (5.1 cm) raised, leakproof door sill. Each shelf is adjustable on 3 in (7.6 cm) centers, supported by 4 brackets, with a 350 lbs (159 kg) safe allowable load. Includes poly shelf and sump trays to help contain small spills and provide extra corrosion protection. Cabinets are FM-Approved and meet NFPA Code 30 and OSHA requirements.

## Specifications

---

Model No	PEST1923X
Color	Green
Material Specifications	18-Gauge Steel
FM Approval	Yes
OSHA Compliance	Yes
Complies with NFPA Code 30	Yes
Door Style	Manual Close
UPC	048441690923
Dimensions, Exterior	23.25W x 18Dx 65H
Dimensions, Interior	20" W x 14.6" D x 60.5" H (50.8 x 37 x 153.7 cm)
Number of Doors	1
Number of Shelves	3
Lock	Yes
Gallon Capacity	24
Liter Capacity	90.85
Replacement Shelf Model No.	29936
Shelf Depth	14" (35.6 cm)
Net Weight, lbs	176
Net Weight, kgs	79.83
Adjustable Shelf	Yes