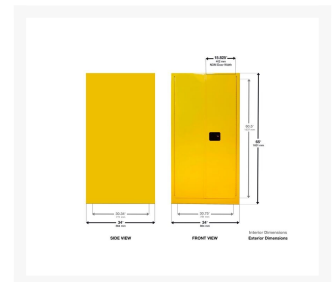

55 Gallon, 1 Drum, Vertical, 2 Door, 1 Shelf, Self Close, Metal Corrosive Safety Cabinet, Blue - CRA2610X

Product Images



Short Description

- Reinforced double wall construction with 1-1/2 in (3.8 cm) air space on sides, top, bottom, back and doors
- Constructed of 18-gauge steel
- Lead-free, high-gloss, baked-on powder finish
- Continuous piano hinges

- Ground connection
- Four adjustable galvanized leveling legs
- Trilingual warning labels
- 2 in (5.1 cm) raised leakproof sill
- Patented adjustable galvanized steel shelves direct spills to back and bottom of leakproof sump and hold 350 lbs. (158.8 kg) Uniform Distributed Load (UDL)
- Internal and external welded construction
- Two 2 in (5.1 cm) internal vents with fire baffle and cap
- Flush mounted door handle with key lock
- Three-point stainless steel bullet latching system
- 3 in (7.6 cm) centers for shelf brackets
- Self-latching doors
- Door closings: Self-Closing (135° opening)
- Concealed self-close mechanism provides obstruction-free access to top shelf space
- Self-indexing doors guarantee they will close in sequence and ensure a tight closure from top to bottom

Description

Eagle 55 Gallon, self-closing, Acid & Corrosive Vertical Drum Storage Safety Cabinet, can safely contain a 55-gallon drum. The cabinet features a convenient half shelf for additional storage space for accessories or containers and drum supports to keep drums elevated off cabinet sump. Constructed of 18-gauge (1 mm) steel, the sides, top, bottom, and doors are double-walled with a 1-1/2 in (3.8 cm) air space between walls. Includes two vents, each have 2 in (5.1 cm) threaded fittings and a fire baffle and cap. Cabinets have a corrosion-resistant powder coat finish with trilingual warning label, plus grounding attachment, 3-point latch system, and 2-in (5.1 cm) raised, leakproof door sill. Each shelf is adjustable on 3 in (7.6 cm) centers, supported by 4 brackets, with a 350 lbs (159 kg) safe allowable load. Not recommended for use with Sulfuric, Nitric or Hydrochloric acids. Cabinets are FM-Approved and meet NFPA Code 30 and OSHA requirements.

Specifications

| | |
|-----------------------------|--|
| Model No | CRA2610X |
| Color | Blue |
| Material Specifications | 18-Gauge Steel |
| FM Approval | Yes |
| OSHA Compliance | Yes |
| Complies with NFPA Code 30 | Yes |
| Door Style | Self-close |
| UPC | 048441692323 |
| Dimensions, Exterior | 34W x 34Dx 65H |
| Dimensions, Interior | 30.75" W x 30.34" D x 60.5" H (78.1 x 77.1 x 153.7 cm) |
| Number of Doors | 2 |
| Number of Shelves | 1 |
| Lock | Yes |
| Gallon Capacity | 55 |
| Liter Capacity | 208.2 |
| Replacement Shelf Model No. | 29946 |
| Shelf Depth | 14" (35.6 cm) |
| Net Weight, lbs | 349 |
| Net Weight, kgs | 158.3 |
| Adjustable Shelf | Yes |