


# 55 Gallon, 1 Drum, Vertical, 1 Shelf, 2 Door, Safety Cabinet, Manual Close, Red - 1926XRED

## Product Images

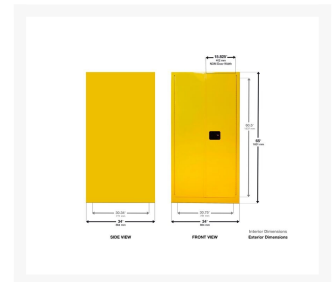

## Short Description

- Reinforced double wall construction with 1-1/2 in (3.8 cm) air space on sides, top, bottom, back and doors
- Constructed of 18-gauge steel
- Lead-free, high-gloss, baked-on powder finish
- Continuous piano hinges
- Ground connection

- Four adjustable galvanized leveling legs
- Trilingual warning labels
- 2 in (5.1 cm) raised leakproof sill
- Patented adjustable galvanized steel shelves direct spills to back and bottom of leakproof sump and hold 350 lbs. (158.8 kg) Uniform Distributed Load (UDL)
- Internal and external welded construction
- Two 2 in (5.1 cm) internal vents with fire baffle and cap
- Flush mounted door handle with key lock
- Three-point stainless steel bullet latching system
- 3 in (7.6 cm) centers for shelf brackets
- Self-latching doors
- Door closings: Manual Close (180° opening)

## Description

---

Eagle 55 Gallon, manual close, Vertical Drum Storage Safety Cabinet, can safely contain a 55-gallon drum of flammable liquid. The cabinet features a convenient half shelf for additional storage space for accessories or containers and drum supports to keep drums elevated off cabinet sump. Constructed of 18-gauge (1 mm) steel, the sides, top, bottom, and doors are double-walled with a 1-1/2 in (3.8 cm) air space between walls. Includes two vents, each have 2 in (5.1 cm) threaded fittings and a fire baffle and cap. Cabinets have a high gloss powder coat finish with red trilingual warning, plus grounding attachment, 3-point latch system, and 2-in (5.1 cm) raised, leakproof door sill. Each shelf is adjustable on 3 in (7.6 cm) centers, supported by 4 brackets, with a 350 lbs (159 kg) safe allowable load. Cabinets are FM-Approved and meet NFPA Code 30 and OSHA requirements.

## Specifications

---

|                             |  |
|-----------------------------|--|
| Model No                    | 1926XRED   |
| Color                       | Red  |
| Material Specifications     | 18-Gauge Steel   |
| FM Approval                 | Yes  |
| OSHA Compliance             | Yes  |
| Complies with NFPA Code 30  | Yes  |
| Door Style                  | Manual Close   |
| UPC                         | 048441692385   |
| Dimensions, Exterior        | 34W x 34Dx 65H   |
| Dimensions, Interior        | 30.75" W x 30.34" D x 60.5" H (78.1 x 77.1 x 153.7 cm) |
| Number of Doors             | 2  |
| Number of Shelves           | 1  |
| Lock                        | Yes  |
| Gallon Capacity             | 55   |
| Liter Capacity              | 208.2  |
| Replacement Shelf Model No. | 29946  |
| Shelf Depth                 | 14" (35.6 cm)  |
| Net Weight, lbs             | 346  |
| Net Weight, kgs             | 156.94   |
| Adjustable Shelf            | Yes  |