


# 55 Gallon 1 Drum, Horizontal, 2 Door, Manual Close, Safety Cabinet, Gray - 1928XGRAY

## Product Images

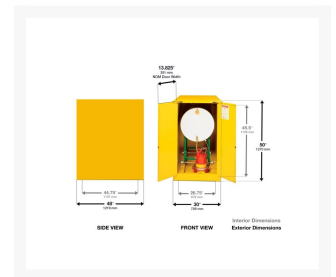

## Short Description

- Reinforced double wall construction with 1-1/2 in (3.8 cm) air space on sides, top, bottom, back and doors
- Constructed of 18-gauge steel
- Lead-free, high-gloss, baked-on powder finish
- Continuous piano hinges
- Ground connection

- Four adjustable galvanized leveling legs
- Trilingual warning labels
- 2 in (5.1 cm) raised leakproof sill
- Internal and external welded construction
- Two 2 in (5.1 cm) internal vents with fire baffle and cap
- Flush mounted door handle with key lock
- Three-point stainless steel bullet latching system
- Self-latching doors
- Door closings: Manual Close (180° opening)

## Description

---

Eagle 55 Gallon, manual close, Horizontal Drum Storage Safety Cabinet, can safely contain a 55-gallon drum of flammable liquid. The cabinet features drum supports for use with optional horizontal drum cradle, model no. 08800. Constructed of 18-gauge (1 mm) steel, the sides, top, bottom, and doors are double-walled with a 1-1/2 in (3.8 cm) air space between walls. Includes two vents, each have 2 in (5.1 cm) threaded fittings and a fire baffle and cap. Cabinets have a high gloss powder coat finish with red trilingual warning, plus grounding attachment, 3-point latch system, and 2-in (5.1 cm) raised, leakproof door sill. Cabinets are FM-Approved and meet NFPA Code 30 and OSHA requirements.

## Specifications

---

Model No	1928XGRAY
Color	Gray
Material Specifications	18-Gauge Steel
FM Approval	Yes
OSHA Compliance	Yes
Complies with NFPA Code 30	Yes
Door Style	Manual Close
UPC	048441692484
Dimensions, Exterior	30W x 48Dx 50H
Dimensions, Interior	26.75" W x 44.8" D x 45.5" H (67.9 x 113.7 x 115.6 cm)
Number of Doors	2
Lock	Yes
Gallon Capacity	55
Liter Capacity	208.2
Net Weight, lbs	323
Net Weight, kgs	146.51